



Kaye Log Temperature Data Logger Instructions

How to activate your Free Sample:

This logger has been pre-programmed with your temperature limits and breach time. All you have to do is activate it. See the reverse side for instructions. To retrieve your temperature data:

- Use an Android or Apple iOS NFC enabled smartphone and tap the device **or**
- Purchase USB NFC reader at www.kayeinstruments.com
- Download the free windows NFC software on our downloads page.



Air Freight



Manufacturing



Warehouse / Trucks




Last Mile

Kaye Log the all-in-one solution for transporting your temperature sensitive products.

How to Activate Your Free Sample Kaye Log Temperature Data Logger

Green LED flashes =
No temperature breach

Red LED flashes =
Temperature breach

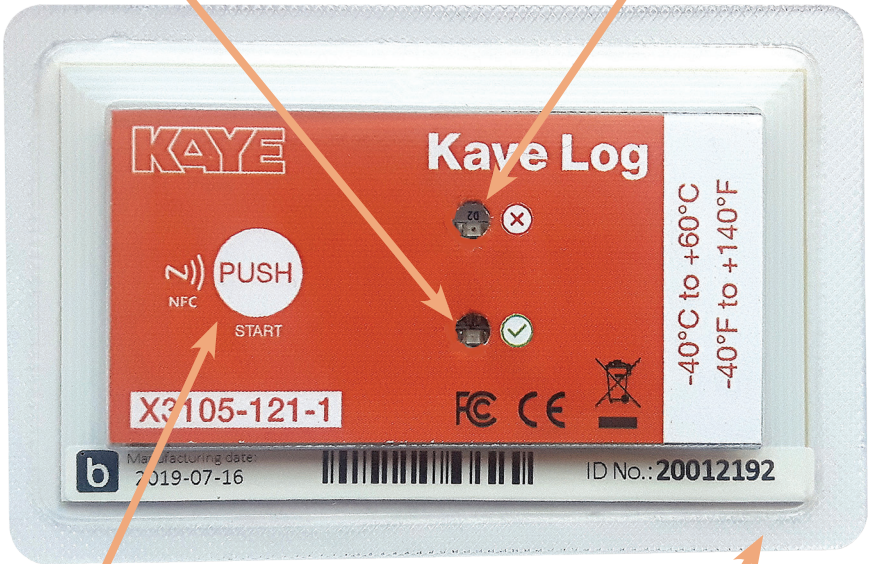

To activate temperature recording, push and hold button for 5 seconds, wait for **Green** LED to start flashing.

Attach to stretch wrap on pallet or box.

For product support, please contact:

Europe: +49 (0) 7231-14-335 | USA: +1 (814) 9410 Email: kaye.log@amphenol-sensors.com

Kaye Log the all-in-one solution for transporting your temperature sensitive products.